Magnetic

Starter



HOMIDI'OSSOd AIr Systif

Replacing Magnetic Starter

972-352-6304/800-531-9656



RTERMAKE SURE POWER IS OFF INJURY **CAN OCCUR IF THIS IS NOT DONE BEFORE CHANGING MAGNETIC**

Pg

www.compressed-air-systems.com



NNGSSON AIT SYSTE

Replacing Magnetic Starter

972-352-6304/800-531-9656



Loosen starter cover screw








Remove pressure switch wire lead from L1 terminal connection



Mirossod Air Systt

Replacing Magnetic Starter



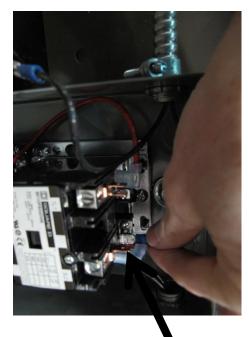

Remove 2nd pressure switch wire from coil connection



Loosen outgoing motor power wires from bottom of starter



Remove motor outgoing power wires from the bottom of the starter

ALWAYS MAKE SURE POWER IS OFF TO COMPRESSOR AND CONTACT FACTORY OR FACTORY FOR ADVICE



Mirossod Air Systt

972-352-6304/800-531-9656





set screws and remove incoming power wires Loosen incoming power



conduit lock nut pressure switch wire Loosen and remove

wire conduit lock nut Loosen and remove motor





Moressed Air Systel

Replacing Magnetic Starter



972-352-6304/800-531-9656

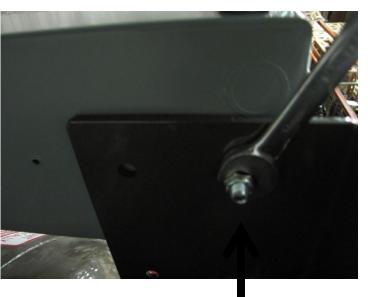

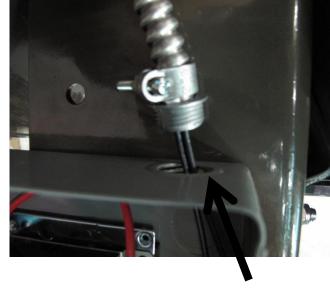

Remove pressure switch wire and conduit. Remove motor leads and motor leads conduit. Remove incoming power wires and conduit.

Loosen and remove starter connection bolt. Then remove old starter from compressor.



Mirossod Air Systt

Replacing Magnetic Starter



972-352-6304/800-531-9656



Starter removed from compressor



and replace wire conduit and put wires compressor package Put new starter on back in place