

## 50-100hp Enclosed Screw Compressor



Feed incoming  
power wires  
through wiring port

Remove panels  
and electrical  
cover

Place 1<sup>st</sup> incoming  
power wire in  
position 1 on the  
compressor motor  
contact


Place 2nd  
incoming power  
wire in position 2  
on the compressor  
motor contact

Place 3rd  
incoming power  
wire in position  
3 on the  
compressor  
motor contact



Put cover back on electric  
panel before checking for  
proper rotation. If rotation is  
incorrect swap wires in position  
1 & 3 to change the rotation.  
Once rotation is correct place  
all panels back on the  
compressor

**ALL WAY MAKE SURE POWER IS OFF  
BEFORE WIRING COMPRESSOR**

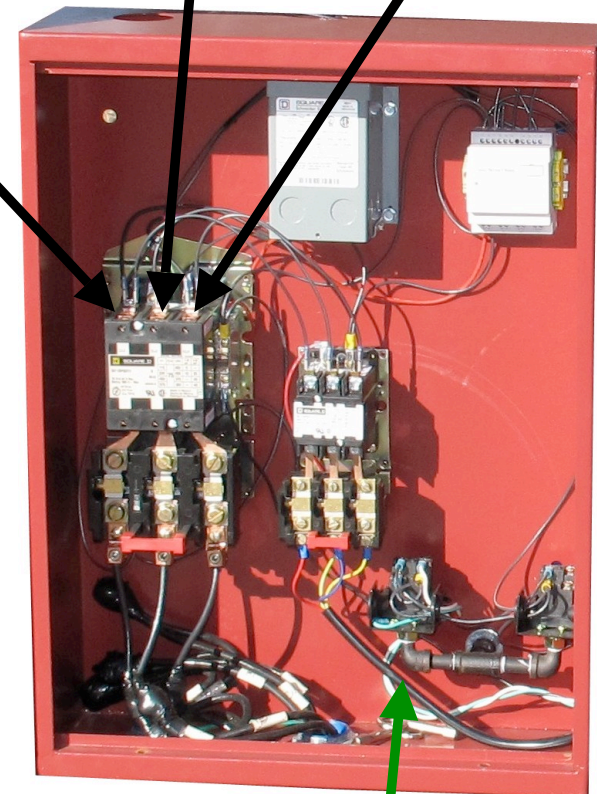

Place ground wire  
under washer