


5HP Reciprocating Cube

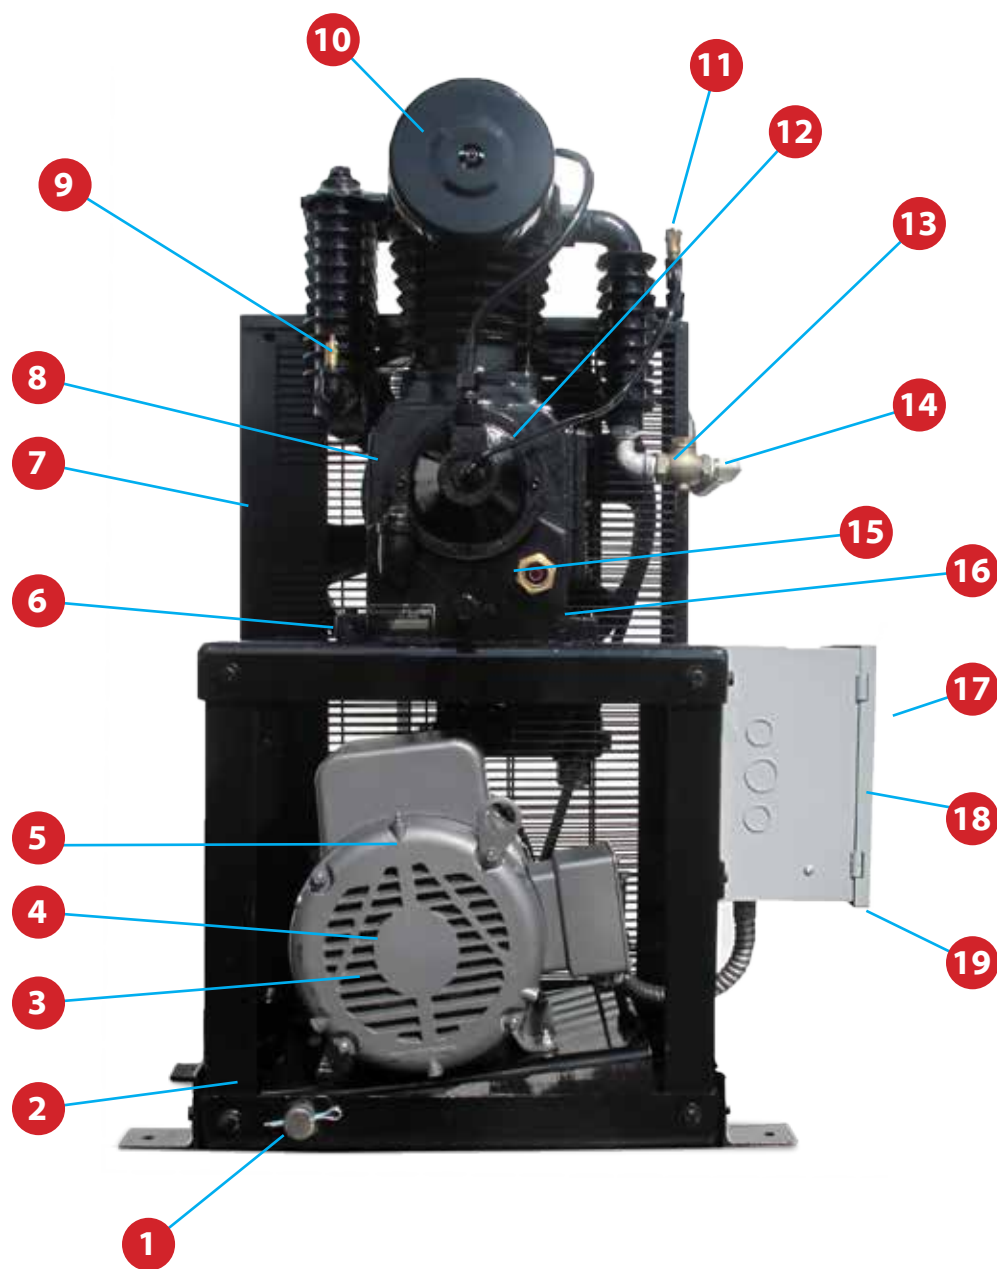

5HP Reciprocating Cube

Item Number	Parts Description	5hp 1 phase	5hp 3 phase 230V	5hp 3 phase 480V
1	Drive motor mounting plate shaft	IAT-CBMTR-SHFT	IAT-CBMTR-SHFT	IAT-CBMTR-SHFT
2	Drive motor mounting plate	IAT-CBMTR-PLT	IAT-CBMTR-PLT	IAT-CBMTR-PLT
3	Electric drive motor	IAT-L1430T	IAT-EM3615T	IAT-EM3615T
4	Drive motor pulley	IAT-LP2B725	IAT-LP2B725	IAT-LP2B725
5	Drive motor pulley mounting hub	IAT-LPH 11/8	IAT-LPH 11/8	IAT-LPH 11/8
6	Belt guard	IAT-BG-CUBE-V3	IAT-BG-CUBE-V3	IAT-BG-CUBE-V3
7	Drive belts	IAT-B72	IAT-B72	IAT-B72
8	Reciprocating compressor pump	IAT-CA1	IAT-CA1	IAT-CA1
9	Inner stage safety valve	IAT-ST25-70	IAT-ST25-70	IAT-ST25-70
10	Reciprocating pump air filter element	IAT-CA-712114	IAT-CA-712114	IAT-CA-712114
11	Discharge safety valve	IAT-ST25-250	IAT-ST25-250	IAT-ST25-250
12	Centrifugal unloader elbow	IAT-CA-070400	IAT-CA-070400	IAT-CA-070400
13	Discharge check valve	IAT-CB75	IAT-CB75	IAT-CB75
14	Discharge JIC fitting	IAT-2404-12-08	IAT-2404-12-08	IAT-2404-12-08
15	Oil sight glass	IAT-CA-731005	IAT-CA-731005	IAT-CA-731005
16	Oil drain tube	IAT-PF3/8X6	IAT-PF3/8X6	IAT-PF3/8X6
17	Motor starter	IAT-A30CRE45BA5E045	IAT-A30CRE45BA5E045	IAT-A30CRF45CX5E045
18	Operational pressure switch	IAT-LF10-1H3	IAT-LF10-1H3	IAT-LF10-1H3
19	Starter control housing	IAT-AB1086-HGCK	IAT-AB1086-HGCK	IAT-AB1086-HGCK

Part numbers subject to change/update always consult factory prior to ordering



Compressed Air Systems, LLC

2626 Skyway Drive
Grand Prairie, TX, 75052

Simplicity. It's What We Do.

Parts Department hours:

Monday-Friday 8:00 - 5:00 CST

1-800-531-9656

Fax 972-352-6364