


Generator Welder Jumpstarter Parts Breakdown

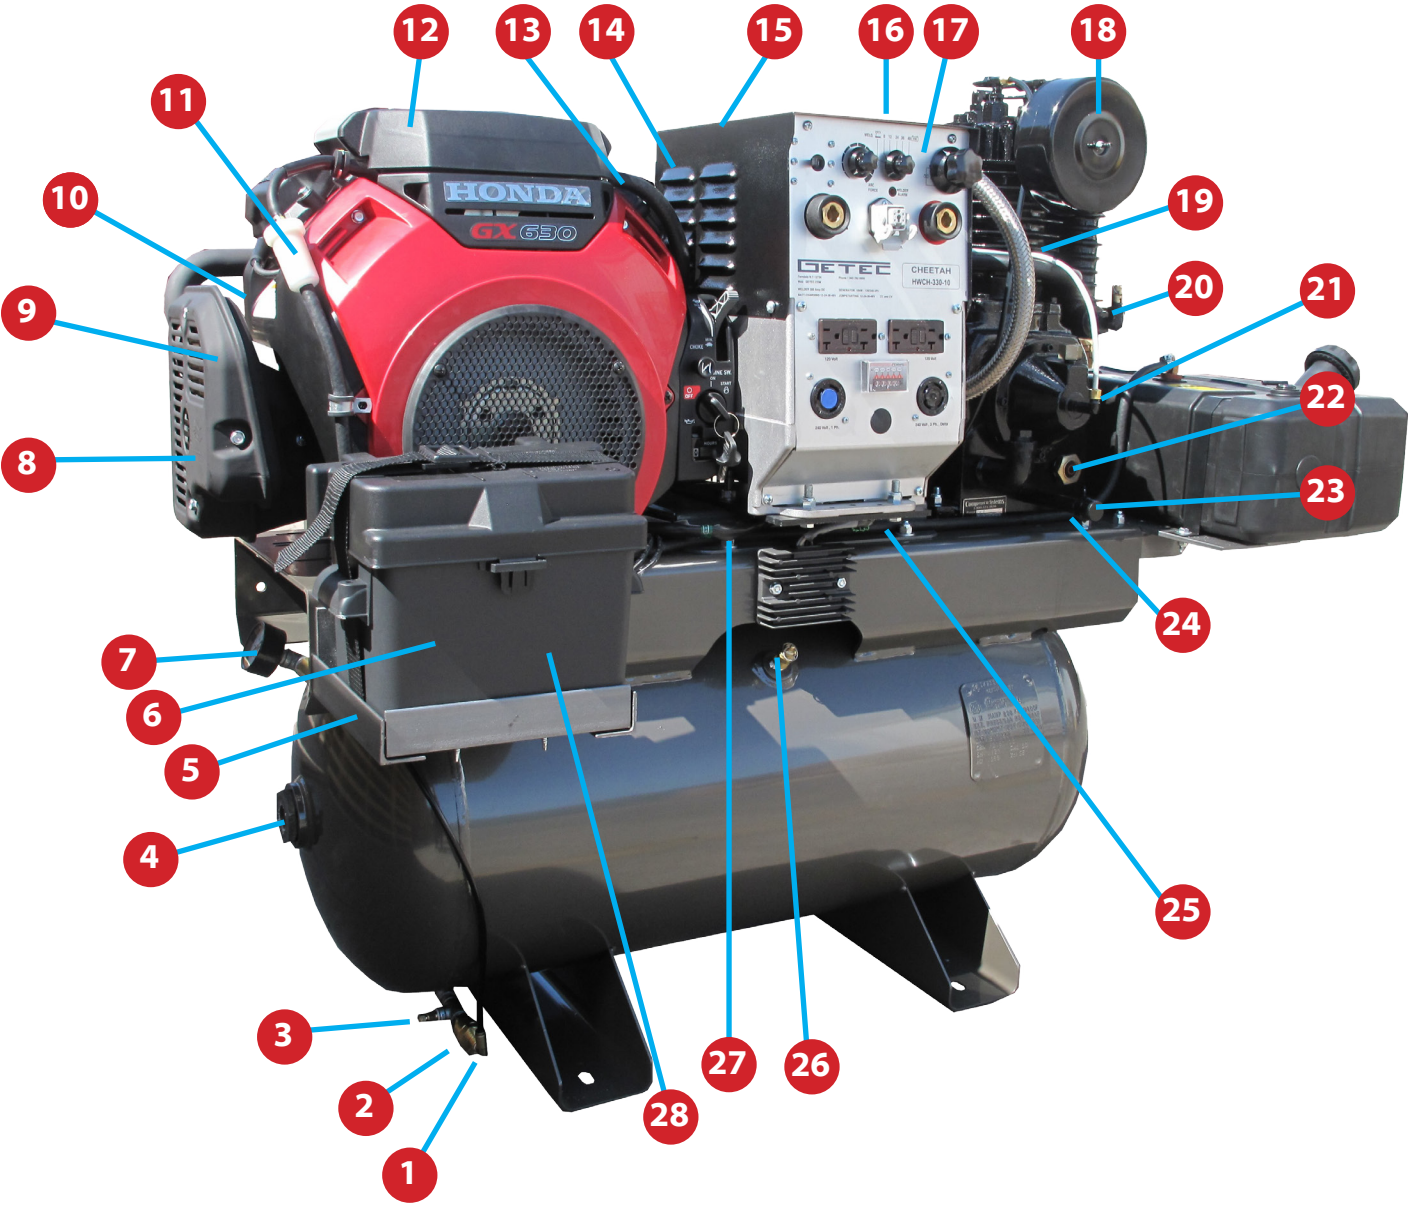

Generator Welder Jumpstarter Parts Breakdown

Item Number	Parts Descriptions	Parts Numbers
1	Pneumatic automatic tank drain	IAT-WV-1
2	Manual tank drain	IAT-BDC604-04
3	¼ Street 90 elbow	IAT-PF1/4STR90
4	Tank discharge ball valve	IAT-716116
5	Battery mounting bracket	IAT-BATTERYBRKT
6	Battery box	IAT-BATTERYBOX
7	Tank pressure gauge	IAT-PSB20
8	Drive engine	IAT-GX690
9	Drive engine pulley	IAT-2B40
10	Drive engine pulley mounting hub	IAT-SH1
11	Belt guard	IAT-BG40X20XSN
12	Generator/Welder/Jump starter drive belt	IAT-B39
13	Generator/Welder/Jump starter	IAT-6016
14	Generator/Welder/Jump starter drive pulley	IAT-1B40SH
15	Generator/Welder/Jump starter drive pulley mounting hub	IAT-SH24
16	Reciprocating compressor drive belt	IAT-B85
17	Reciprocating pump to belt guard cooler discharge line	IAT-SS1/2X24
18	Reciprocating pump air filter element and housing	ELEMENT IAT-CA712114 HOUSING IAT-CA-712140
19	Reciprocating compressor pump	IAT-CA1
20	Inner stage safety valve 70psi	IAT-ST25-70
21	Centrifugal unloader	IAT-CA-070400
22	Oil sight glass reciprocating pump	IAT-CA-731005
23	Reciprocating pump mounting bolts	IAT-3/8X2
24	Oil drain tube	IAT-PF3/8X6
25	Generator/Welder/Jump starter mounting bracket	IAT-GWJSBRKT
25	Tank safety valve 200psi	IAT-ST25-200
27	Generator/Welder/Jump starter belt tensioning base	IAT-184-D-BE
28	30 gallon 200psi MWP tank	IAT-300562

Part numbers subject to change/update always consult factory prior to ordering



Compressed Air Systems, LLC

2626 Skyway Drive
Grand Prairie, TX, 75052

Simplicity. It's What We Do.

Parts Department hours:

Monday-Friday 8:00 - 5:00 CST

1-800-531-9656

Fax 972-352-6364